

HP® 5200™ Series Chip Guide

Installation Instructions

OEM Cartridge Numbers:
Q7516A

Tools/Supplies Needed:
Fine Blade, Tweezers or
Needle-nose Pliers

Machine Models:
HP 5200
HP 5200tn
HP 5200dtn

Photo 1



HP®5200™ Series Chip

Photo 2




Step 1

Use a fine blade to cut along the top edge of the chip to free the OEM chip from the chip housing (see photo 2).

NOTE: Prying the chip loose by force may damage the chip housing.

Photo 3

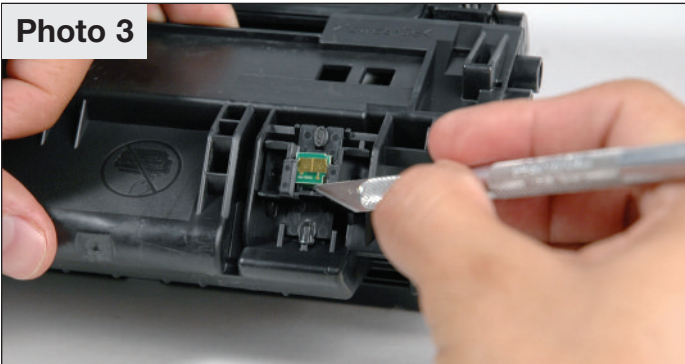

Step 2

Use a fine blade to lift the chip from the bottom of the housing (see photo 3).

Photo 4




Step 3

Carefully remove the OEM chip using a pair of tweezers or needle-nose pliers to lift the chip clear of the housing (see photo 4).

Step 4

Clean the chip housing of any plastic shavings or debris.


Photo 5

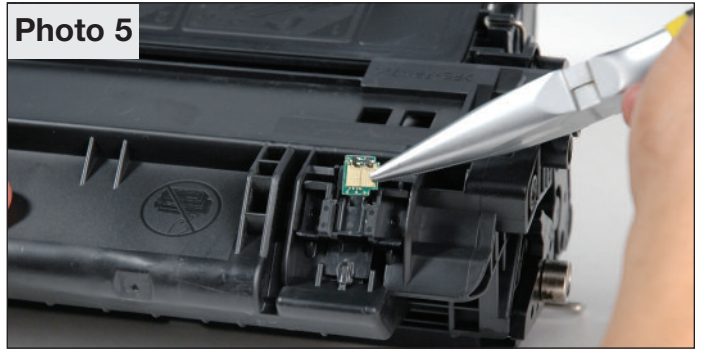

Step 5

Position the replacement chip with the notched corner on the bottom right of the housing (see photo 5), and insert the replacement chip.

Photo 6

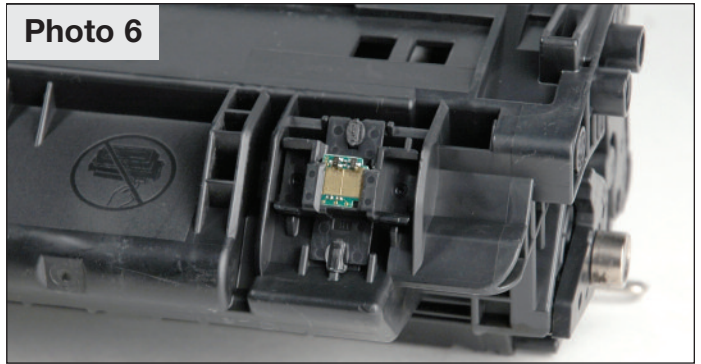

Step 5

Firmly seat the new chip flush along the bottom of the chip housing to ensure proper contact (see photo 6).